

Escape Form 1

Wiring Diagram

- Terminal block not included. Installation must be performed by a qualified person.
- DALI wires ARE NOT polarised
- Depending on installation switched live and unswitched live can both be connected to a permanent live feed.
- Connect battery (internally) before installation
- When the luminaire no longer meets the rated duration of operation then the batteries can be replaced by Formation or our service agent or similar qualified person.

